

# INSTALLATION INSTRUCTIONS



For more information contact...

## **WOODFORD MANUFACTURING COMPANY, LLC**

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032

To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)

## Model 25 & 27 Automatic Draining Freezeless Wall Faucet


Rev 03/25 Form No. II25.104



Model 25  
With Single Check  
Vacuum Breaker

Model 27  
With Dual Check  
Backflow Preventer



**FIGURE 1**

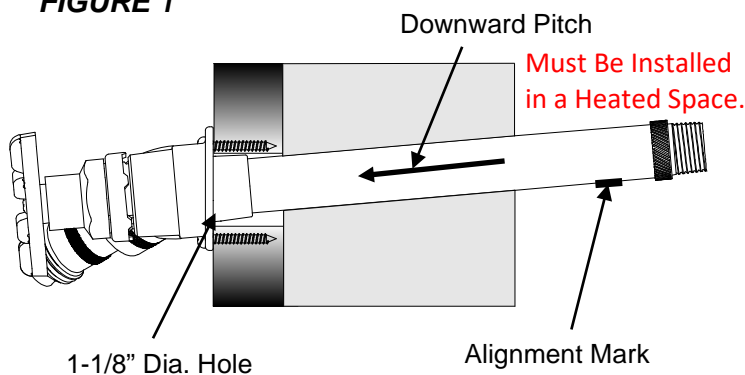

*The proper pitch is built into the flange  
when mounted flush on a vertical wall.*

**FIGURE 2**

Install top of head in the  
horizontal position and level.

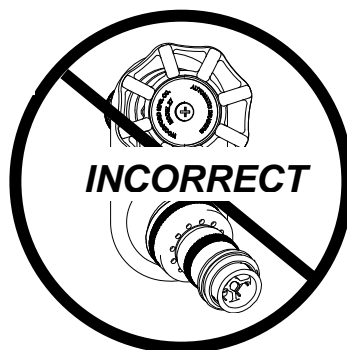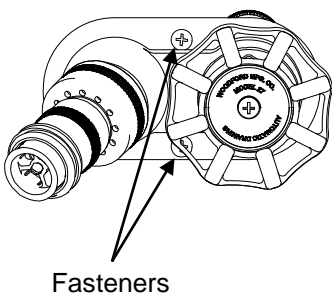

Wall faucets must be properly installed and operated to insure drainage. Improperly installed or operated wall faucets may freeze and burst in freezing weather.

### INSTALLATION INSTRUCTIONS:

1. Before installation, flush supply line to remove any debris.
2. Drill a 1-1/8" diameter hole through the wall in the desired location and insert the faucet from the outside. **FIGURE 1**
3. Install top of head in the horizontal position and level. **FIGURE 2**
4. From inside the building, the alignment mark on the tube can be used to correctly align the faucet when the mark is pointed down. **FIGURE 1**
5. The tube must have a slight downward pitch for proper drainage. The proper pitch is built into the flange when mounted flush on a vertical wall. **FIGURE 1**
6. For solder connection, open faucet to full open position before soldering. Excessive heat can damage valve seat rubber and factory solder joint.
7. Secure faucet to the wall using appropriate fasteners installed through the holes in the flange. **FIGURE 2**
8. **Water Supply Connection Must Be Installed in a Heated Space. FIGURE 1**

### OPERATING INSTRUCTIONS:

To OPEN, turn handle counter-clockwise

To CLOSE and DRAIN, turn handle clockwise until seated and water drains out the drain holes behind handle

*The Model 25 and 27 drain automatically when fully shut off, even with a hose attached.*