# TECH-NOTE



For more information contact...

### WOODFORD MANUFACTURING COMPANY, LLC.

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: www.woodfordmfg.com or email: sales@woodfordmfg.com

07/12 Rev 2


## Model 67

## Freezeless Wall Hydrant with....

#### PATENTED HIGH FLOW DOUBLE CHECK BACKFLOW PREVENTER

- NIDEL $^{\circledR}$  Model 50HA with  $^{3}\!\!\!\!/$  inch male hose thread
- · ASSE Standard 1052 approved
- Field Testable
- · Two Independent Check Valves
- · Drains automatically when hose is removed
- · No spray back



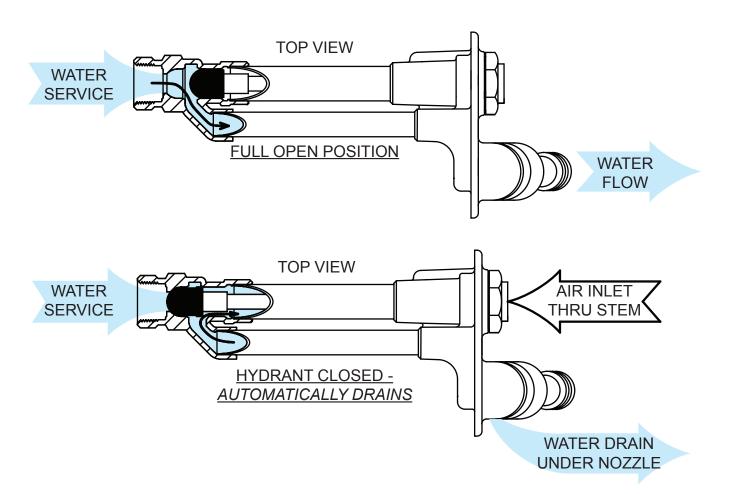

NOTE: HYDRANTS DRAIN AUTOMATICALLY WITH OR WITHOUT HOSE ATTACHED.

# 7/15/6/11/10/11



For more information contact...

#### WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115 To view our complete product line visit: www.woodfordmfg.com or email: sales@woodfordmfg.com A Division of WCM Industries. Inc.

07/12 Rev 2


## **RB65 & RB67**

### **Round box** Installation Instructions

Round Box Patent No. US D470,915 S

### Suggested installation through concrete wall:

- 1. Using a 6" core drill, locate and core drill a 6" diameter hole through wall.
- 2. Cut two lengths of 3/8-16 threaded rod long enough to protrude 1" through the back of the hole when box is installed. Spin one 3/8 back-up nut onto each rod to lock rods in place against box. Screw rods into provided tapped holes located in back of round box then tighten back-up nuts.
- 3. Make two back-up plates from available metal bar or angle to span 6"hole.
- 4. Set round box assembly in hole. Install back-up plates and draw-up loosely with
- 5. Position and plumb unit in hole. Tighten back-up plate nuts to complete installation.

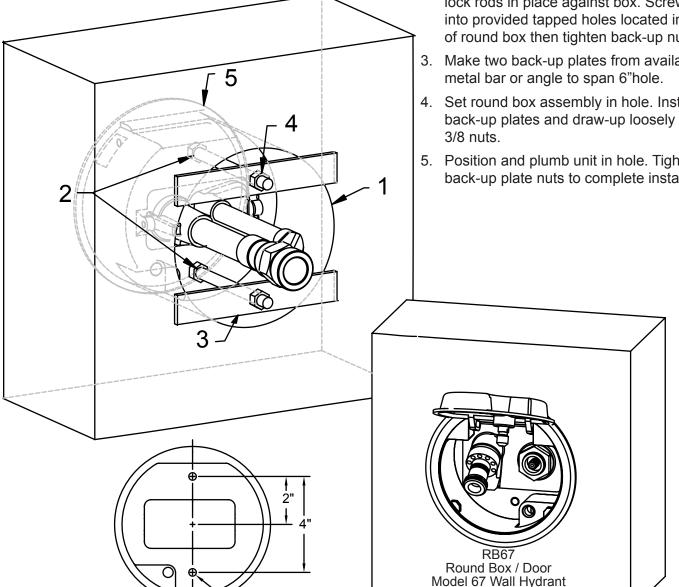

3/8-16 (2)

Mounting Hole Detail